

# SONANCE

## UA 2-125 ARC AMPLIFIER QUICKSTART GUIDE

### BOX CONTENTS

- (1) Quickstart Guide
- (1) UA 2-125 ARC Amplifier
- (1) Power Cord (Region Dependent)
- (1) IR Receiver
- (1) Speaker Block Connector
- (2) Mounting Brackets
- (4) T-Nuts

### PREPARING

1. Prepare smartphone and enable Bluetooth.
2. Use the QR code to download and install the SonARC App.



### INSTALLATION

1. The UA 2-125 ARC chassis comes with brackets, T-Nuts, and 20mm T-Slot grooves for easy mounting.
2. Thread a seismic tether through the hole in the upper left corner of the Audio Connector Panel when mounting in locations where the amplifier could fall and damage property or cause injury. For more mounting information please see the Operation Manual.

### GETTING STARTED

The Sonance UA 2-125 ARC amplifier comes ready to play audio out-of-the-box. Installers should set up the amp using the SonARC interface (Bluetooth required) for optimal performance. Sonance suggests the following installation sequence:

1. The UA 2-125 ARC amp should be away from moisture and temperatures exceeding 100°F (38°C).
2. Mount the UA 2-125 ARC using the included mounting brackets and T-Nuts.
3. Connect audio inputs: HDMI and/or Analog RCA.
4. Connect speaker outputs.
5. Connect the power cord.
6. Confirm source device (HDMI or Analog RCA).
7. Power the UA 2-125 ARC on.
8. Unmute the source device.

### STATUS INDICATOR LED

- **SOLID GREEN:** analog input selected
- **SOLID WHITE:** digital input selected
- **SOLID BLUE:** setup mode, Bluetooth, or IR learning
- **SOLID YELLOW:** standby
- **FLASHING RED (1HZ):** protection state
- **SOLID PURPLE:** mixed input mode

### SOURCE CONNECTIONS

The UA 2-125 ARC amplifier can support multiple connections. In the SonARC App, one connection can be selected as the default source, while the other will be the secondary source. Normally, audio will play from the default source. If audio is detected on the secondary

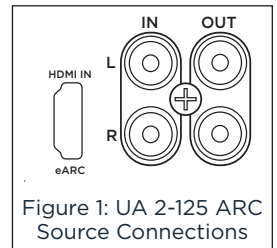 


Figure 1: UA 2-125 ARC Source Connections

source the UA 2-125 ARC will automatically switch to the secondary source. From the factory the default source for the UA 2-125 ARC is the HDMI connection while the Analog RCA connections are the secondary source. If you are using a digital source (HDMI), make sure that the source device is set up to provide a 2-channel PCM signal.

### SETUP BUTTON

Bluetooth on the UA 2-125 ARC should be on by default. If the phone running the SonARC App cannot connect with the UA 2-125 ARC unit, press the SETUP button to initiate the Bluetooth connection.

### IR CONTROL

The IR 3.5mm jack can be used to receive IR commands from a distribution box or provided sensor. Refer to the UA 2-125 ARC webpage for specific IR control codes. This feature will turn on automatically when the IR sensor is plugged in, and does not need to be enabled in the SonARC App interface.

 
### CLIP INDICATOR LED

When the amp is clipping, audio peaks display as RED flashes. If this occurs, the amplifier is being overdriven and the volume control needs to be reduced until the peaks no longer cause the LED to illuminate.

# SPEAKER CONNECTIONS

**NOTE: The UA 2-125 ARC is capable of driving 4 ohm stereo and 8 ohm stereo loads.**

1. Connect speaker wire (up to 12 AWG) to the Speaker Block Connector. Important - keep all wire strands inside the plastic shell. Damage may occur if speaker wires short together or touch the amplifier housing.

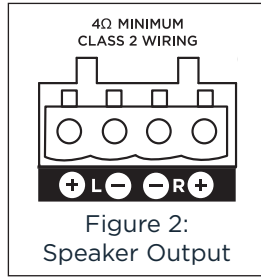


2. Plug the block connector into the amplifier and check that there is no strain on the speaker wire.

# POWERING THE AMPLIFIER

 Plug the provided power cord into the amplifier.

**Important: do not plug the power cord into the wall outlet until all system connections have been made.**

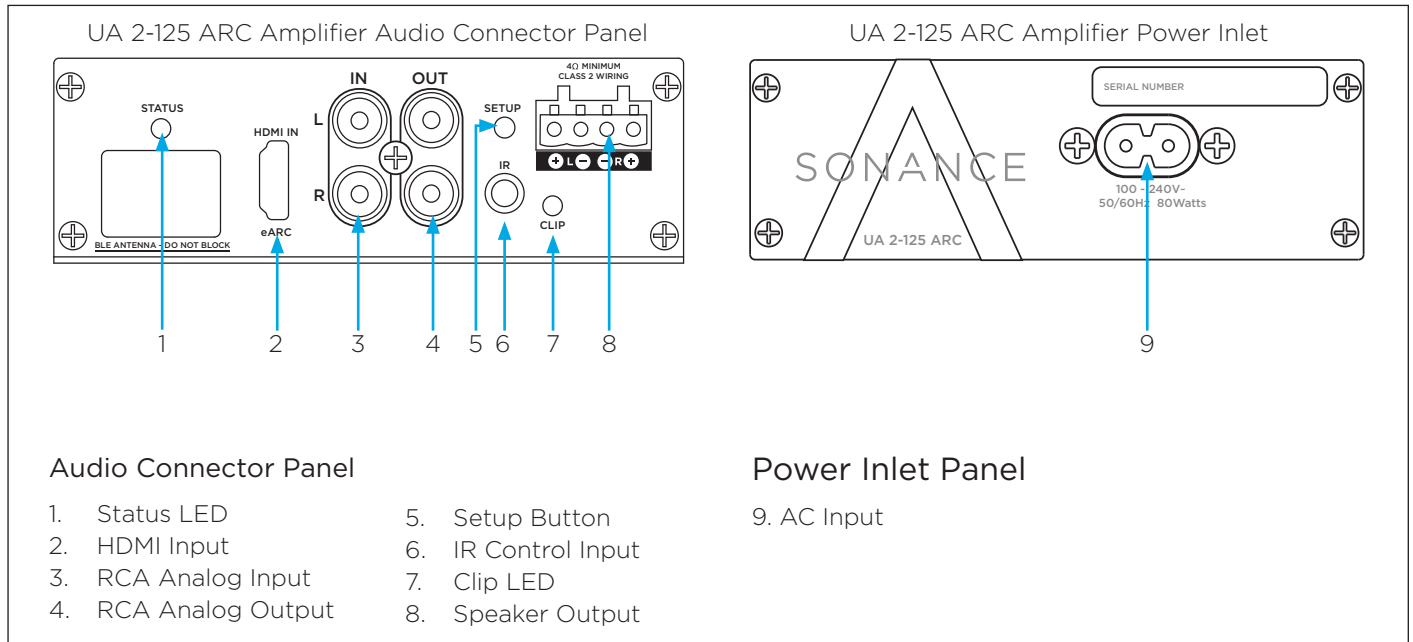

## Audio Connector Panel

- |                      |                     |
|----------------------|---------------------|
| 1. Status LED        | 5. Setup Button     |
| 2. HDMI Input        | 6. IR Control Input |
| 3. RCA Analog Input  | 7. Clip LED         |
| 4. RCA Analog Output | 8. Speaker Output   |

## Power Inlet Panel

9. AC Input



Scan QR code for additional information.  
For technical support call 949.492.7777  
or visit [www.sonance.com](http://www.sonance.com)

©2025 Sonance. All rights reserved. Sonance is a registered trademark of Dana Innovations. Due to continuous product improvement, all features and specifications are subject to change without notice. For the latest Sonance product specification information visit our website: [www.sonance.com](http://www.sonance.com)

SONANCE • 991 Calle Amanecer • San Clemente, CA 92673 • (949) 492-7777  
12.23.2024